


Site Amenities

BY SUPERIOR RECREATIONAL PRODUCTS

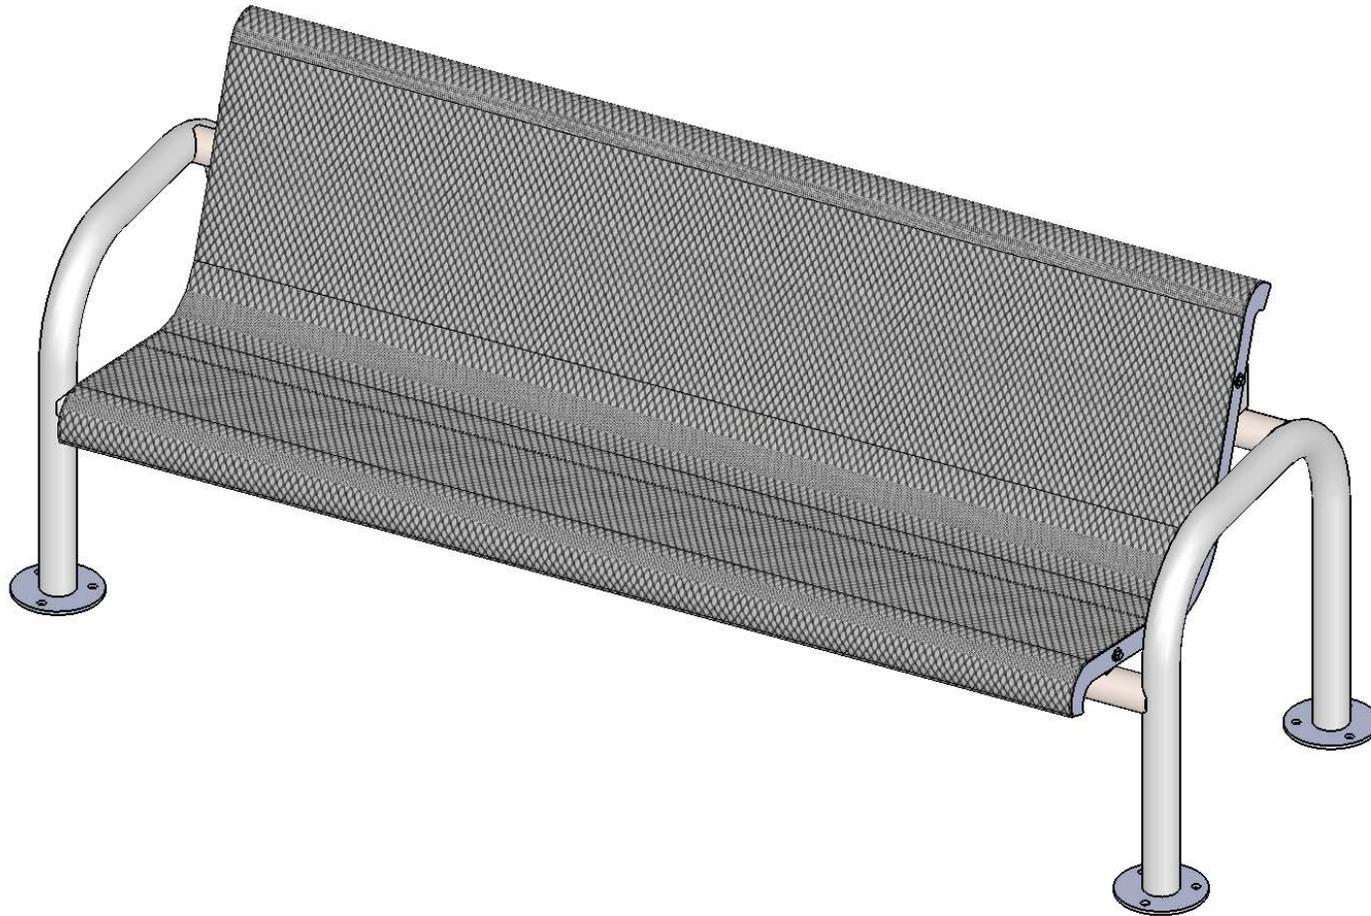


MODEL # B6WBMODERNPSM
B6WBMODERNPSM-SS

 **SUPERIOR**[®]
RECREATIONAL PRODUCTS
A **PLAYCORE** Company


HARDWARE



5/16" x 1"
Machine Bolt

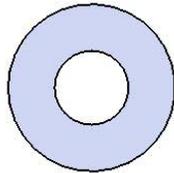

5/16" Washer



5/16" Kep Nut

PRODUCT SPECIFICATIONS

B6WBMODERNPSM / B6WBMODERNPSM-SS PORTABLE / SURFACE MOUNT CONTOURED BENCH WITH BACK

Seats: Seats dimensions are 24-3/4" x 15-1/8". 3/4" #9 steel expanded metal. End plates are made of 7 gauge flat steel plate. Reinforced with 3/16 x 1-1/2" flat strip. Electrically MIG welded.

Coating: Oven fused functionalized polyethylene copolymer-based thermoplastic. Fluidized bed coating application with superior mechanical performance, impact resistance and UV-stability.


Frame: Legs are 2-3/8" O.D. x 10 gauge pre-galvanized structural steel tubing. Seat support is bent over a mandrel through the bend radius producing a wrinkle free bend. Tube ends are pre-galvanized steel capped. Seat mounting points are 7 gauge x 1-1/2" die stamped steel flat bar. Spreader bars are 2-3/8" O.D. x 10 gauge pre-galvanized structural steel tubing. A 6" diameter steel plate makes up the surface mount footing. The surface mount plate has three holes for stable mounting. All electrically MIG welded.

Frame Coating: Electrostatic powder coated application oven cured.

Hardware: All stainless steel hardware fasteners.

Dimensions: 6' portable / surface mount bench with back. Seats are 27" wide x 72" long. Seat height is 18" from the ground to the top of the seat. The overall dimensions are 80-1/2" x 30-1/4" x 33-1/4".

COMPONENTS

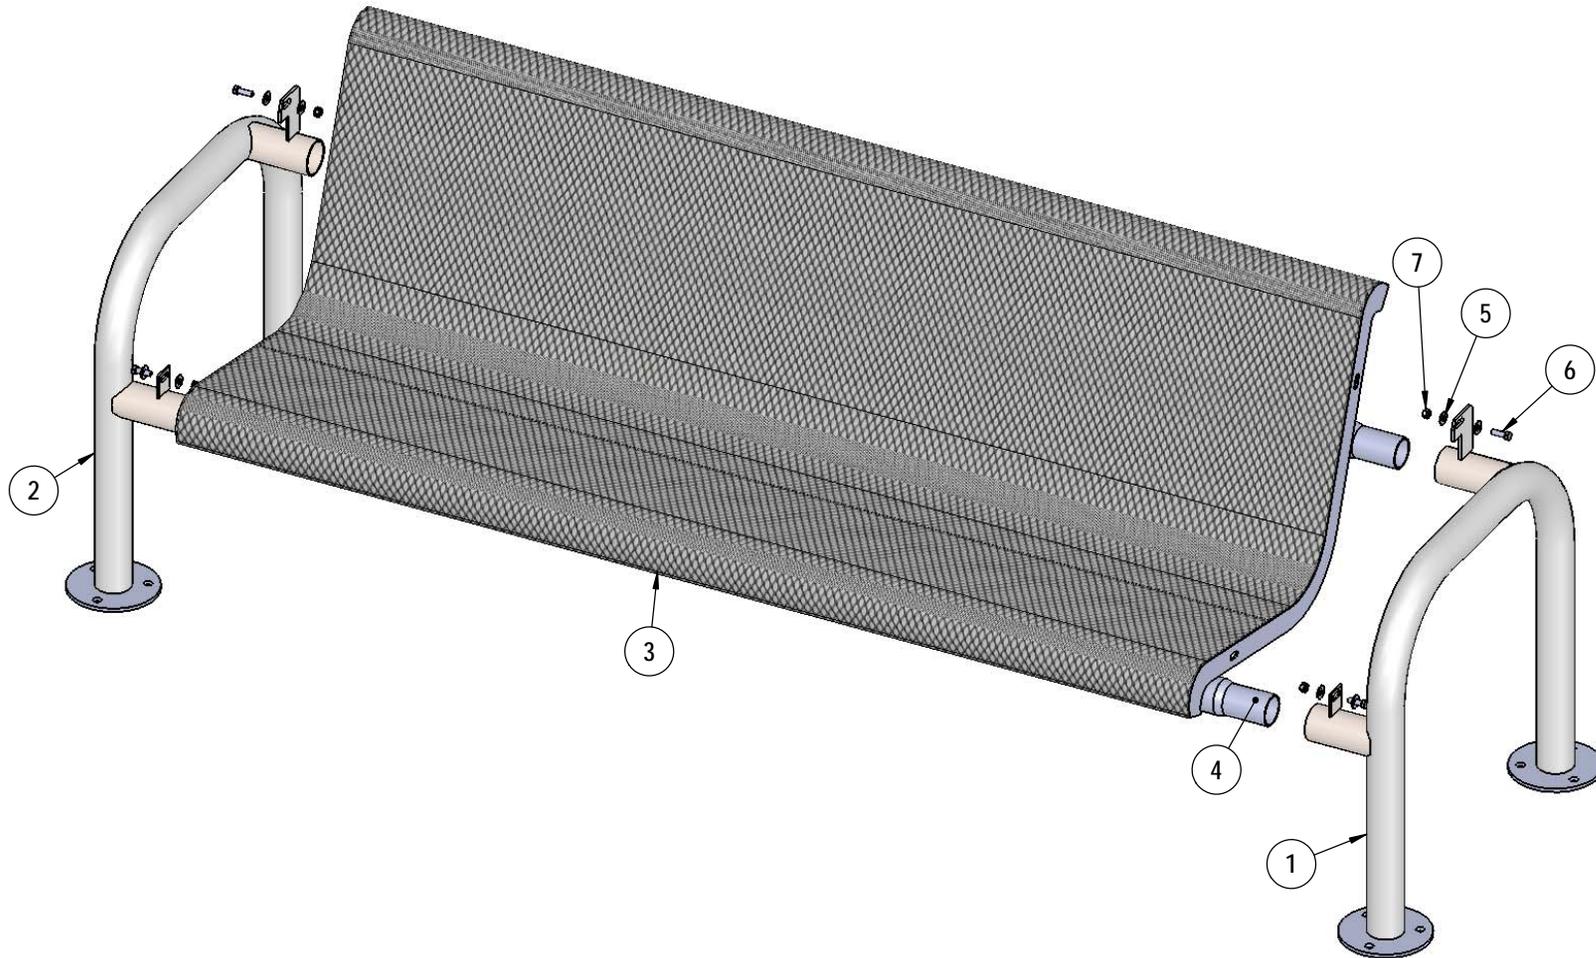


ITEM NO.	PartNo	DESCRIPTION	QTY.
1	P-V965P-L	965P-LH leg	1
2	P-V965P-R	965P RH leg	1
3	T-V72CT-S	6' Expanded Contour Bench	1
4	01-01-0308	6' spreader tube	2
5	33-02-0007	5/16" SS Washer	8
6	33-05-0029	5/16" x 1" Machine Bolt (SS)	4
7	33-03-0012	5/16" Kep Nut (SS)	4

Optional Surface Mount Hardware:
 3/8" x 3-1/2" Concrete Expansion Anchor Bolts
 (Not Included)




STEP 1

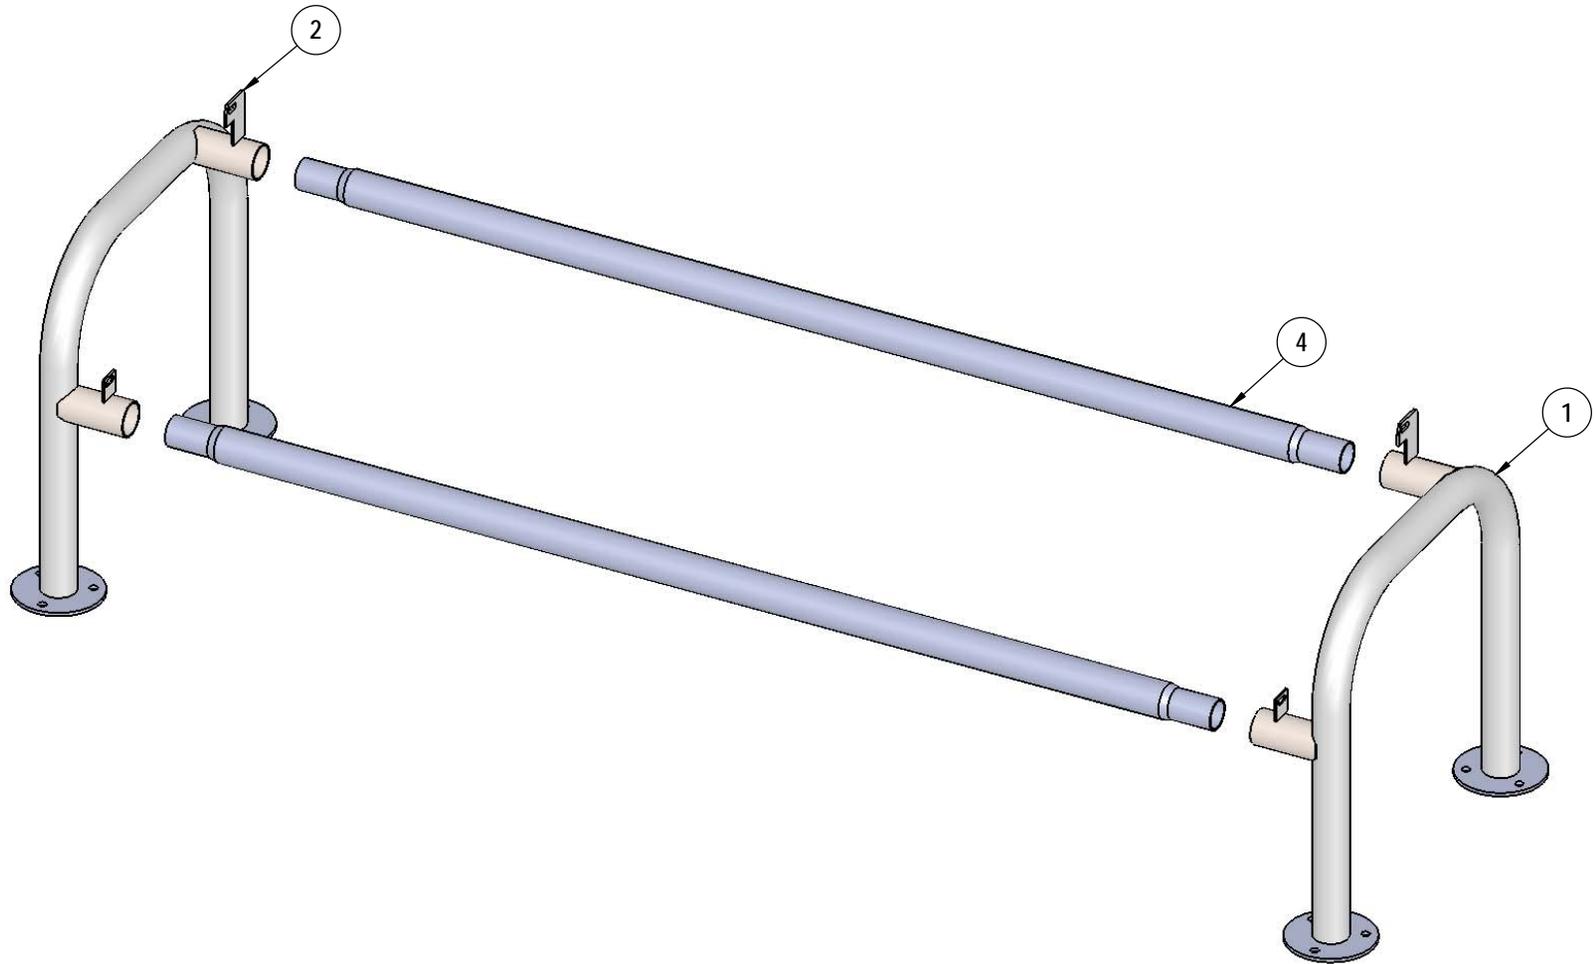

Slide the Spreader Tubes into the Legs.

STEP 2

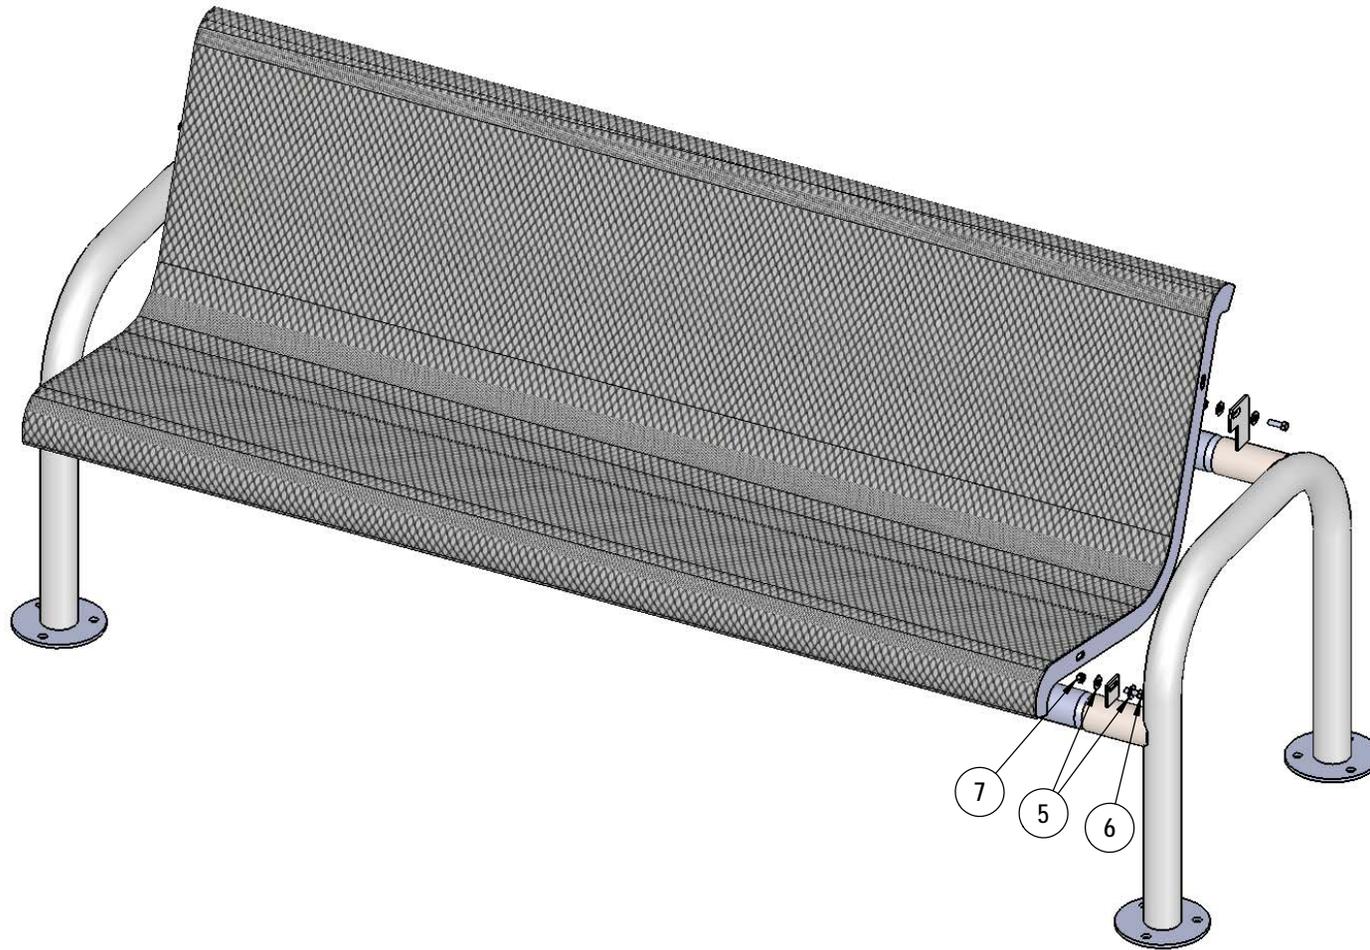

Attach the 6' Contour Seat to the Legs using specified hardware.

OVERALL DIMENSIONS

